



**TTWS Program Guide:**  
Dual receiver system (8 wands)

Blue LED outside top indicates power is ON.

1. Mute system horn by turning alarm switch OFF.
2. Press black button 3 times and hold on 3rd push.
3. Within 15 seconds press the red button 2 times and hold down.
4. Green program LED between the black & red buttons will flash.
5. Release the red button while still holding the black button down.
6. Once in programming mode press the 1st safety wand button 1 time, green LED flashes once.
7. Press the 2nd safety wand button 1 time, green LED will flash twice.
8. Press the 3rd safety wand button 1 time, green LED will flash 3 times.
9. Press the 4th safety wand button 1 time, green LED will flash 4 times.
10. Release the black button.
11. You must repeat program sequence when switching between groups 1-4 & 5-8 to program all 8 wands.
12. If a wand is replaced it IS necessary to reset all 8 wands.